

AVHub


Quick Start Guide

Meeting Audio & Video Processor




• Mount on the Rack

- 1 Install the mounting ears on both sides of the AVHub.

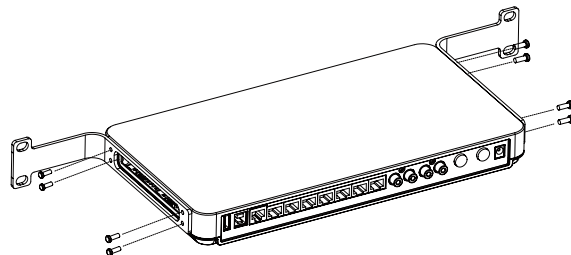

- 2 Push the AVHub into the rack, and then fix it to the rack with screws.

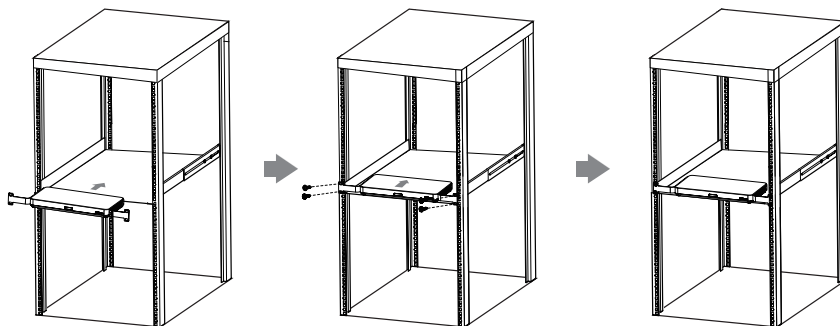


 The rack in which the AVHub will be placed must be a 19-inch Rack compliant with IEC 60297. The Package Contents do not include screws.

6 Endpoint Connection


💡 AVHub has two types of connection, you can choose to connect in VCS endpoint or USB endpoint according to your needs.

• Connect to VCS Endpoint

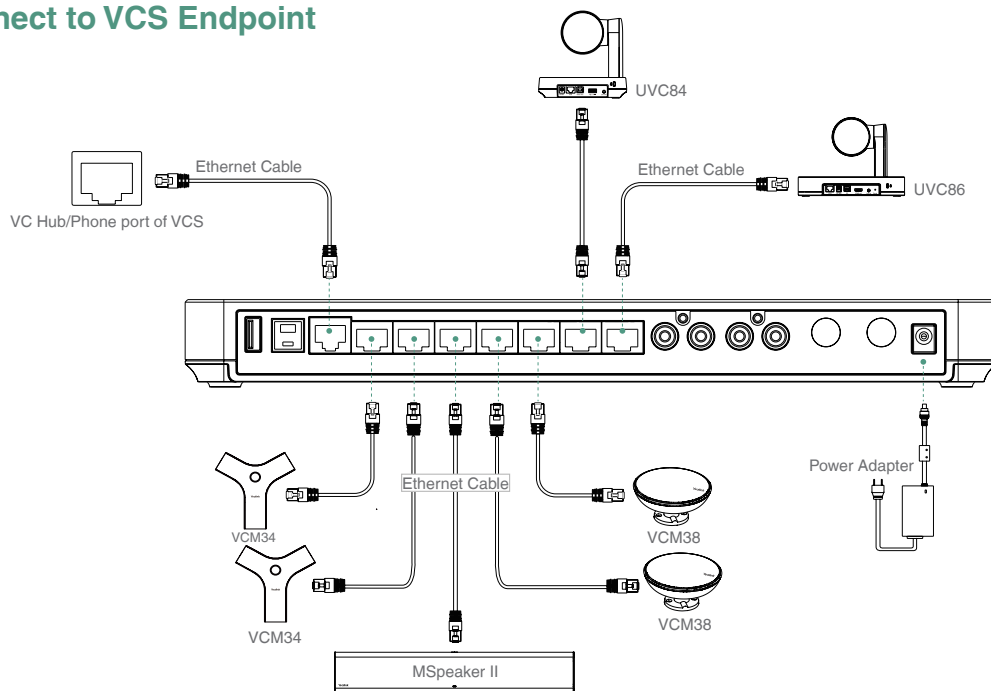


• Connect to MVC Endpoint

💡 When you connect the UVC84/UVC86/MSpeaker II directly to the AVhub, the total number of connections must be no more than 4 devices. If the total number of connections exceeds 4 devices, you need to connect a PoE switch, and other interfaces can be connected to wired microphones.

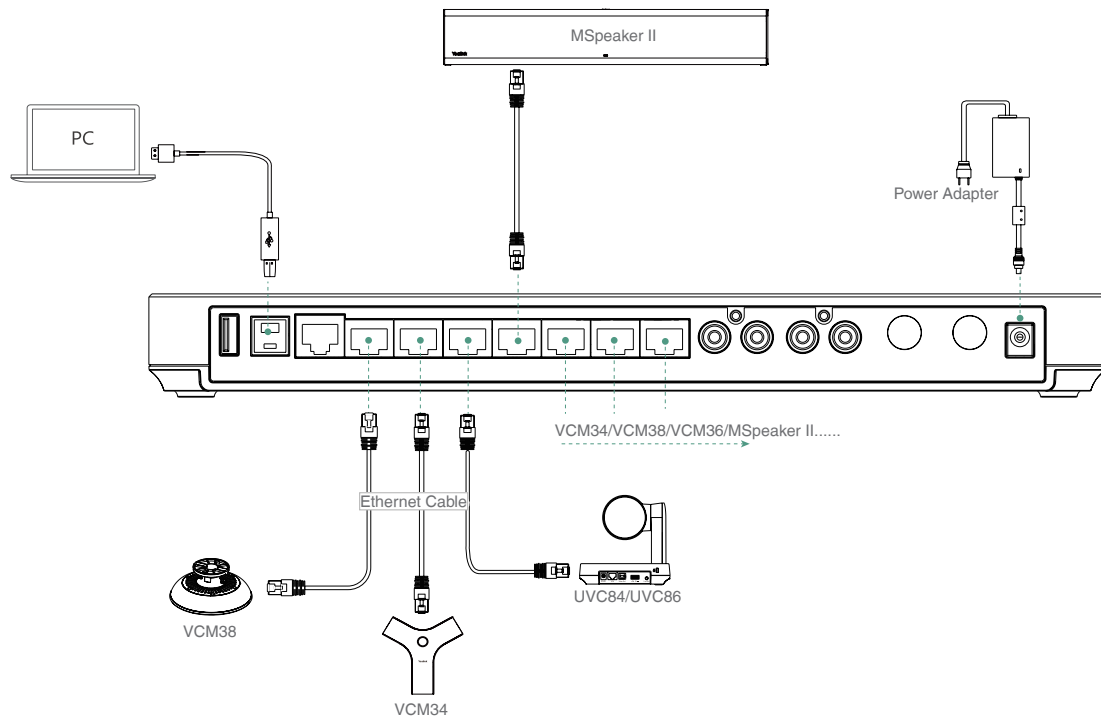

• Connect to MVC Endpoint

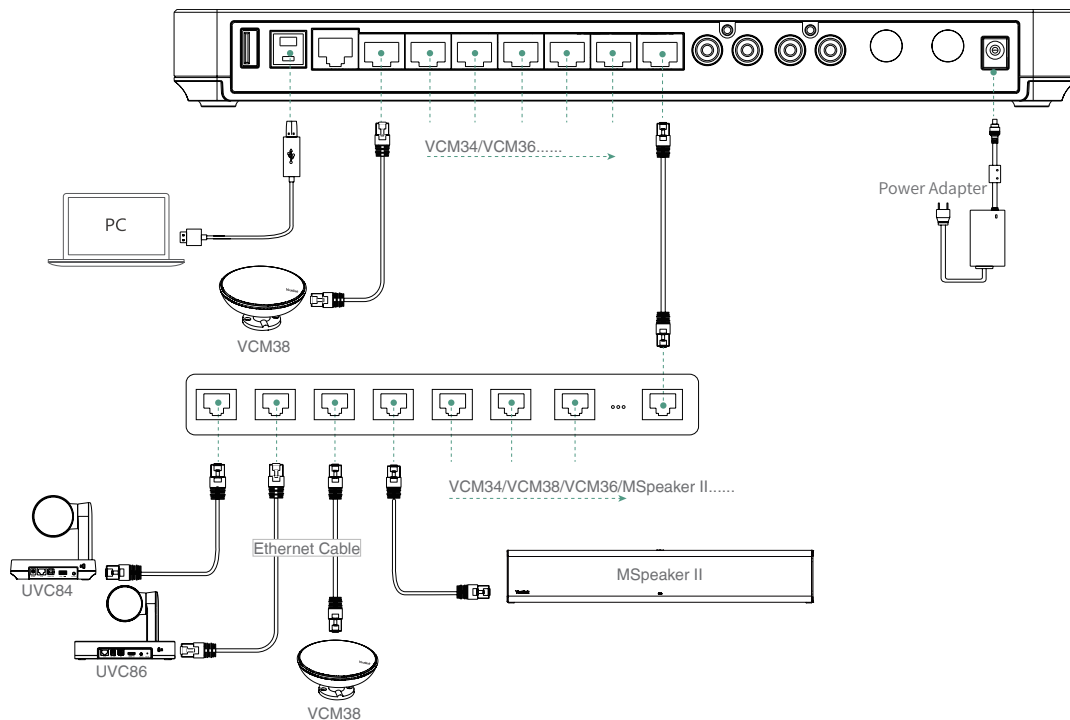

 If you need more VCH ports of AVHub, you can connect the AVHub via a PoE switch.